



Quick Start Guide

Preliminary Information:

- 1.---After purchasing your CONTROL-X2, it is time to put it to work. Your CONTROL-X2 arrives pre configured with a standard thermal profile, clock is set to Eastern Standard Time, system timers are set to all zeros and not active. Your CONTROL-X2 is fully operational and ready to use out of the shipping box.

Setup & Program fast:

- 1.---Have access to your CONTROL-X2. It should NOT be plugged into any AC Power or Plugged into your computer via USB cable at this time.
- 2.--- Install BHRcontroller Studio Software from ELEproducts.com using ClickOnce deployment.
- 3.--- Start the application if it has not already started. From your computer click *START, ALL PROGRAMS, ELEproducts.com, BHRcontroller Studio*.
- 4.---From BHRcontroller Studio, install the required USB drivers. Click *HELP, Install USB Drivers*.
- 5.---Attach ONLY the USB cable (**NO AC POWER**) from the computer to the sealed connector found on the CONTROL-X2 controller. When connected via the USB interface the status bar will change from [*Hardware NOT CONNECTED*] to [*Hardware CONNECTED*]. You can now program your CONTROL-X2, however you like.

NOTES:

- Programming can only be done with (**NO AC POWER**) Additional CONTROL-X2's can be programmed by simply removing one and attaching another with the USB cable.

Questions & Problems:

- 1.--- Contact ELEproducts.com

sales@eleproducts.com

PHONE: 304-445-2718 (M-F EST 8-4PM)